



*genie.* mini II

Setup Guide

## Genie Mini II

An extremely easy-to-use device for creating smooth panning motion time-lapse or real-time video. Wirelessly connect to the Genie Mini using the Genie App for quick setup and simple motion control.

This Setup Guide will take you through the basics, to get you started using your Genie Mini II for the first time.


*A full user manual can be found on the support page at [www.syrp.co](http://www.syrp.co)*

## Whats in the Box


- Genie Mini II




- 1/4" to 3/8" Thread Adapter  
(screwed into the base)

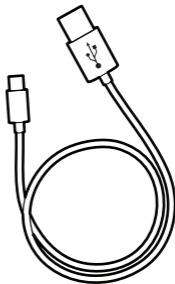

- USB-C to USB-A Cable

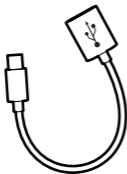


- USB-C to USB-A  
Female Cable

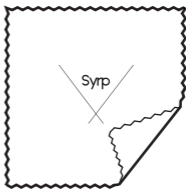


- Micro Fiber Cloth

# Genie Mini II Interface

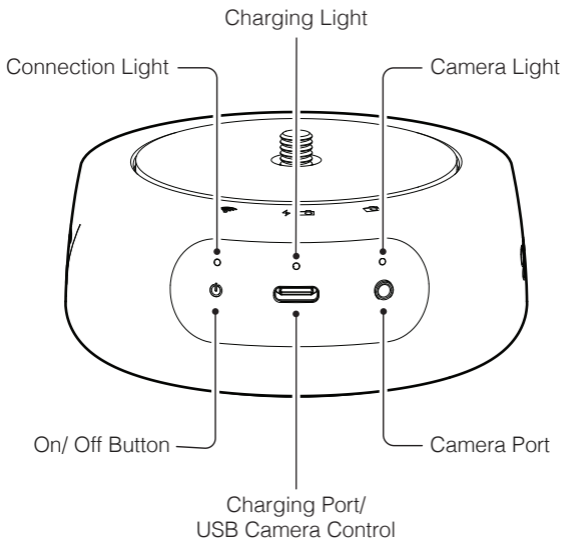

## Charging

- 1 Plug the USB cable into a wall charger, laptop or USB port.

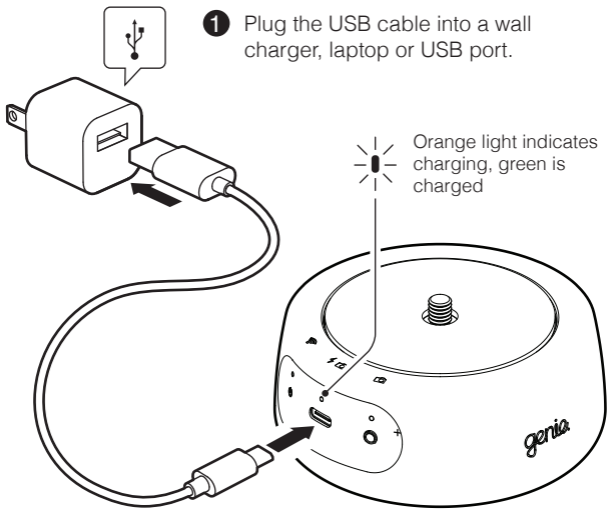

- 2 Plug the USB-C plug into the Genie Mini charging port.

## Mount the Genie Mini II

- 1 Screw the Genie Mini II to a tripod head or tripod legs. The thread adapter in the base can be used for smaller threads.
- 2 Screw your camera to the top of the Genie Mini II.




Try a ballhead between the camera & Genie Mini II to easily frame your shots

## Shutter Control


- 1 Plug the 2.5mm end of you Link Cable (sold separately) into the camera port on the Genie Mini II.
- 2 Plug the other end into the remote port on your camera. Consult your camera manual to find the correct port.

The link cable is not required for video recording

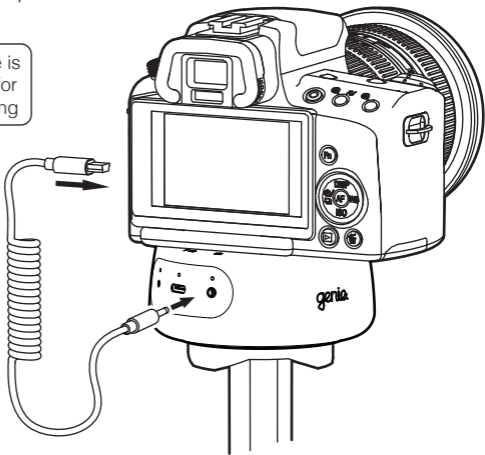



## Camera Control

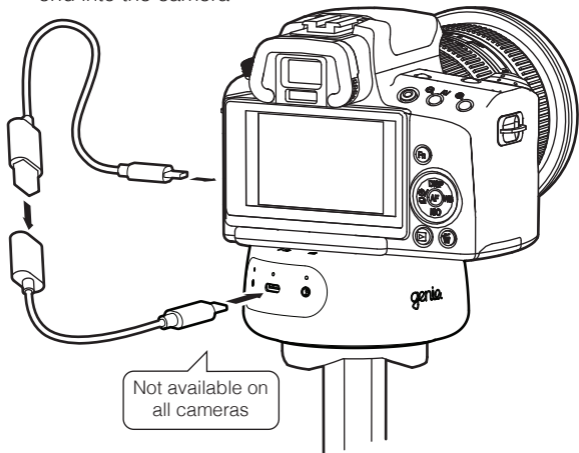- 1 Plug the USB-C end of the USB-C to USB-A Female Cable into the USB-C port on the Genie Mini II.
- 2 Plug the USB cable that came with the camera into the USB-C to USB-A Female Cable and the other end into the camera







## Device Connection

- 1 Turn bluetooth ON  in the settings menu on your device.
- 2 Download and open the Genie App.
- 3 Press the power button  on the Genie Mini II once to turn it on.  
(Don't hold the power button down)


Flashing LED indicates ready to pair and solid green indicates paired

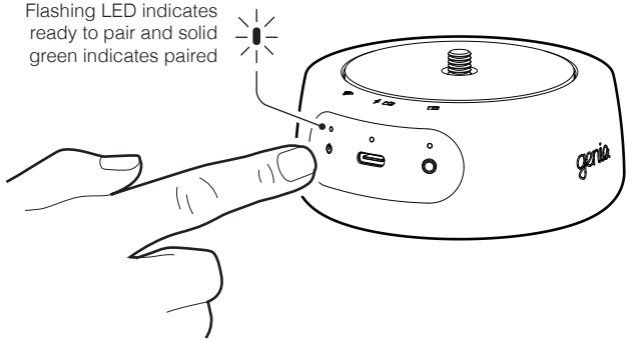

# App Connect

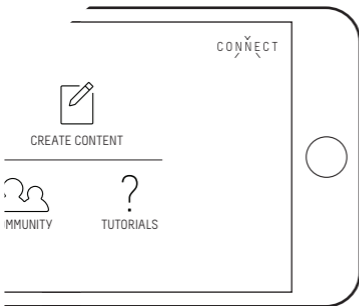



- 1 Tap the **CONNECT** icon

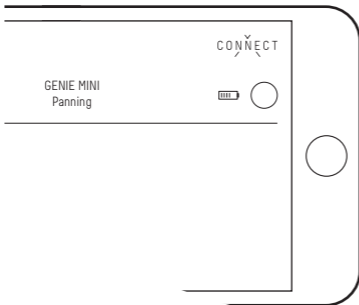



- 2 Select  your Genie Mini II

## Firmware Update

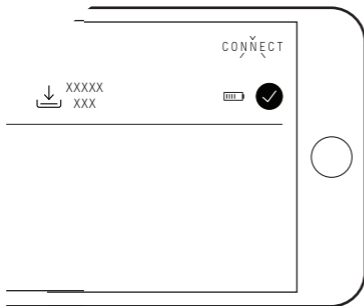

- 1 Tap the  icon to update firmware

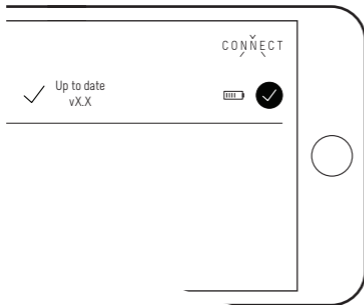

- 2  icon appears when device has updated

## Learn More

For tutorials on operating the Genie Mini II and navigating the App tap the question mark ? on the home screen of the App or subscribe to our YouTube Channel.



[youtube.com/syrp](https://youtube.com/syrp)



[instagram.com/syrp\\_](https://instagram.com/syrp_)



[facebook.com/syrp.co.nz](https://facebook.com/syrp.co.nz)



[twitter.com/syrp\\_](https://twitter.com/syrp_)



[support@syrp.co.nz](mailto:support@syrp.co.nz)




[www.syrp.co](http://www.syrp.co)

## Genie Mini II Quick Tips

- Always set your camera and lens to manual focus (MF), if set to Auto Focus (AF) the camera can misfire leading to missed frames.
- Turn image review OFF on your camera. On some cameras image review can cause missed frames in your time-lapse.
- Once you begin a time-lapse or video recording you can leave the App and disconnect, your move will continue to run as normal.
- Press the power button once to turn the Genie Mini II on.
- To turn the Genie Mini II off you must first disconnect in the connection window on the Genie App before holding the power button for 5 s.
- Hold the power button down for more than 20 s to force shutdown the device.

## Firmware Tips

The App will alert you if a new firmware update is available. If you have trouble updating the Firmware try these tips:

- Retry updating the device by tapping the  icon
- Force the device into factory mode by holding down the power button for more than 10 seconds when the device is off. Release the power button once all the LED's start flashing at the same time. Try updating the device from the app, the devices name will have changed to "Syrp:XXXXXXXXXXXX"
- If the update fails on iOS make sure Wi-Fi Assist is off in system settings
- Try the update from a different location or device.